



# PlayStation Move Controller Teardown

This is a quick teardown of the playstation move controller.

Written By: mcwiggan



## INTRODUCTION

This is a quick teardown of the playstation move controller.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — PlayStation Move Controller Teardown



- Playstation Move Controller


## Step 2



- Remove the 4 screws holding the back over and trigger button on.



## Step 3

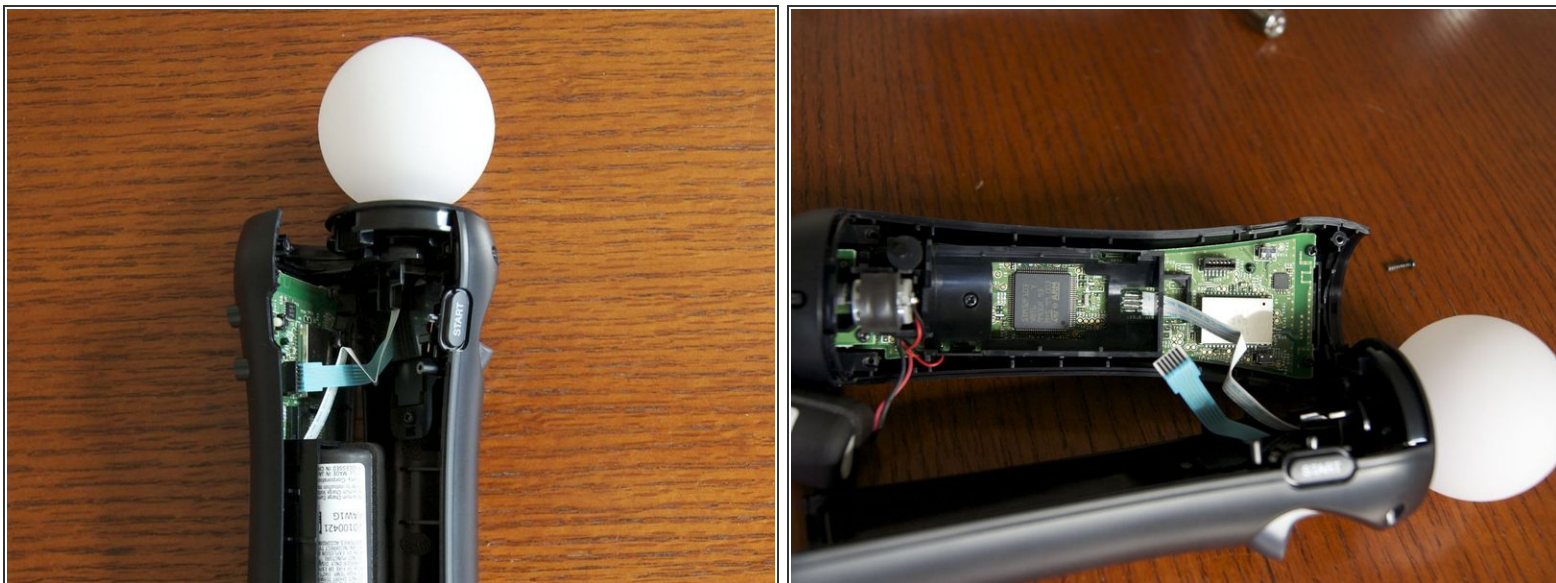

- Once open you will see two ribbon cables.
- The one connected to the trigger button is removable.
- The ribbon cable attached to light globe is soldered on.

## Step 4




- Light Globe Cover and the LED Module can be separated.

## Step 5



- The battery can easily be removed. There is connector on the side of the board.
- Battery Specs: Single Cell 1380 mAh 3.7 Volt
- Sony Part: LIS1441


## Step 6

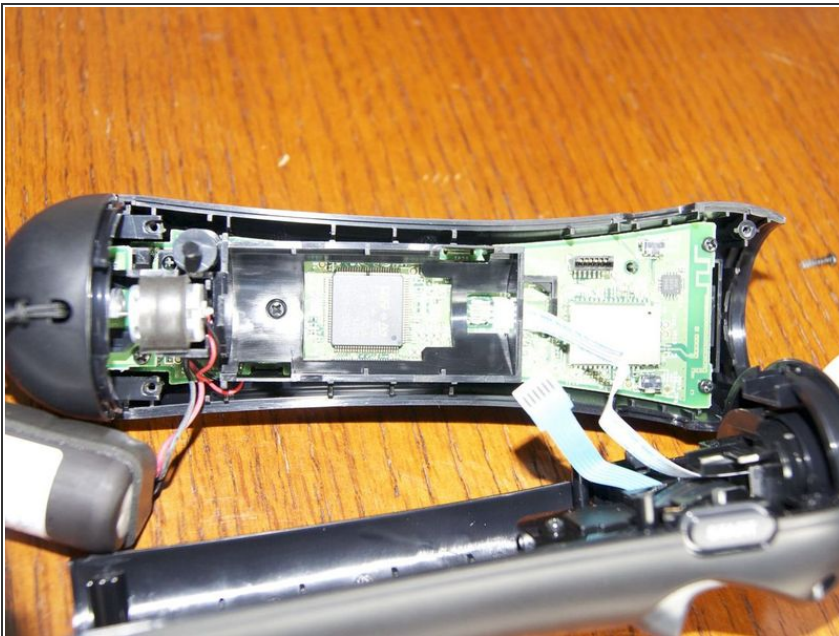

- Remove the inner plastic (1 Screw) frame to expose the logic board
- Remove the 2 top screws and one bottom screw to remove the logic board from the controller.



## Step 7

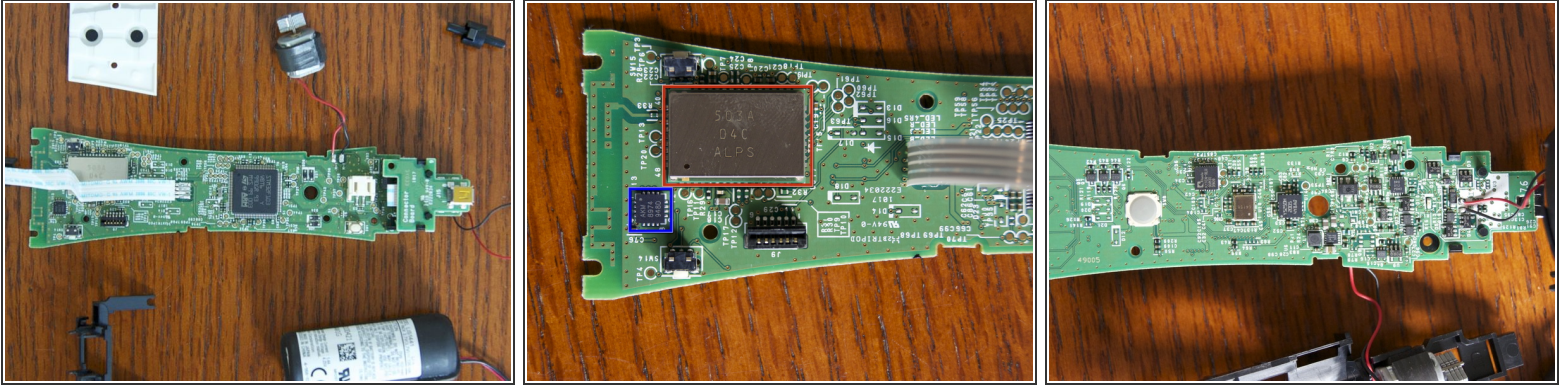

- Logic Board
- Chip Closeups Included
- 503A 04c ALPS - Radio Module
- AKM8974948D - MEMS Gyroscope

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:50:39 PM.